

Grip To open

No Key Needed Quick Unlock

Open the door by pressing do on the handle, No waiting, Which has more comfortable hand feeling and conveyent life.



APP
Unlocking



Fingerprint
Unlocking



Password
Unlocking



Card
Unlocking



Manual
Key



USB
Powered



Work with
Amazon Alexa



Remote
Control



Low Battery
Alarm



Time
Attendance

KEEPING REAL PASSWORDS SECURE

Enter any number before and after the password,
and enter the password correctly in the middle continuously to open





TEMPORARY PASSWORD CREATION REMOTE SHARING UNLOCK

14G



5 WAYS TO UNLOCK



IC CARD



PASSWORD



FINGERPRINT



KEY



APP



4 AAA BATTERIES EASY TO CHANGE

Built-in low battery alarm function





DEAD BATTERY WHAT TO DO?

Mechanical key/Emergency unlocking of power bank



 
 Mechanical keyhole

 USB emergency charging port



Multiple Batteries Are Available

VARIOUS BATTERIES
ARE AVAILABLE

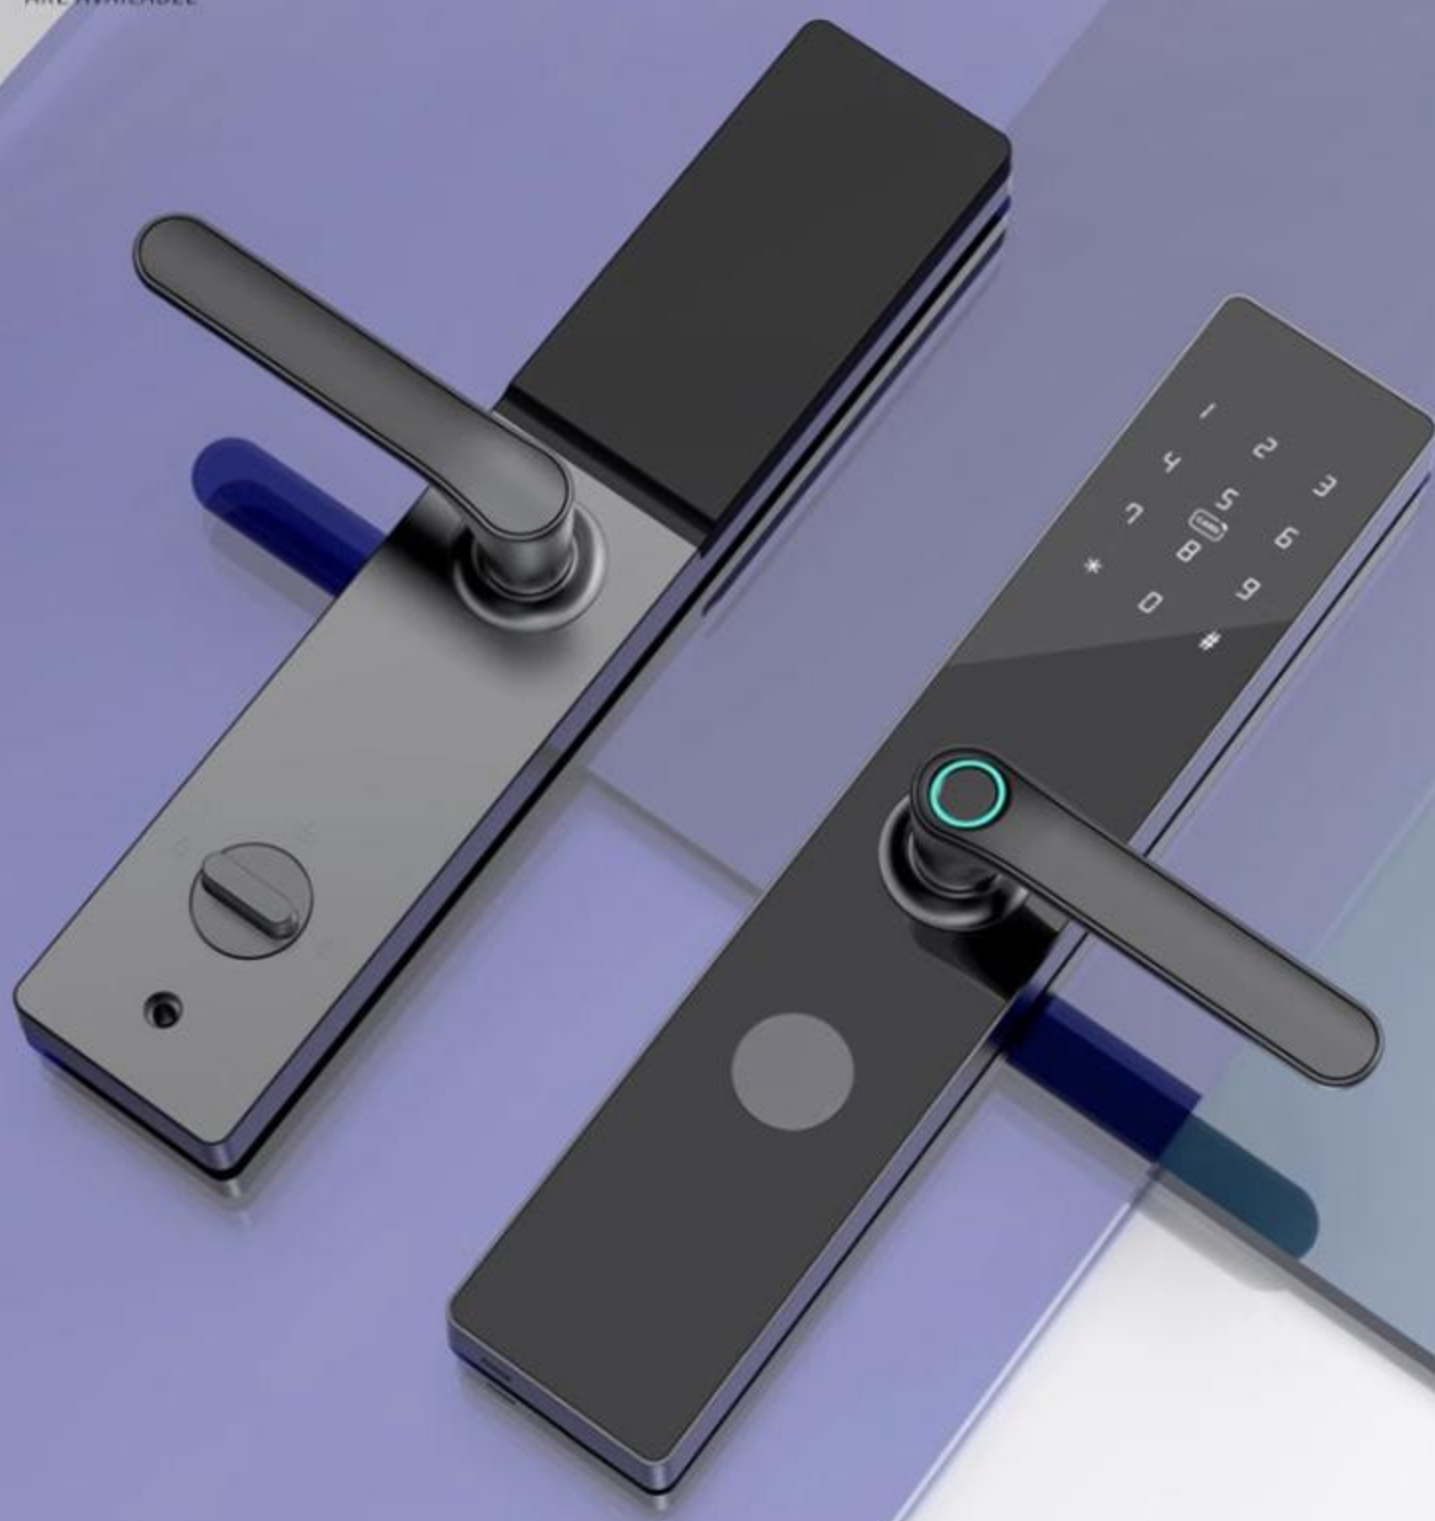

4 AAA Batteries



8 AAA Batteries



 
Lithium Battery



PRODUCT SIZE




Factory data reset

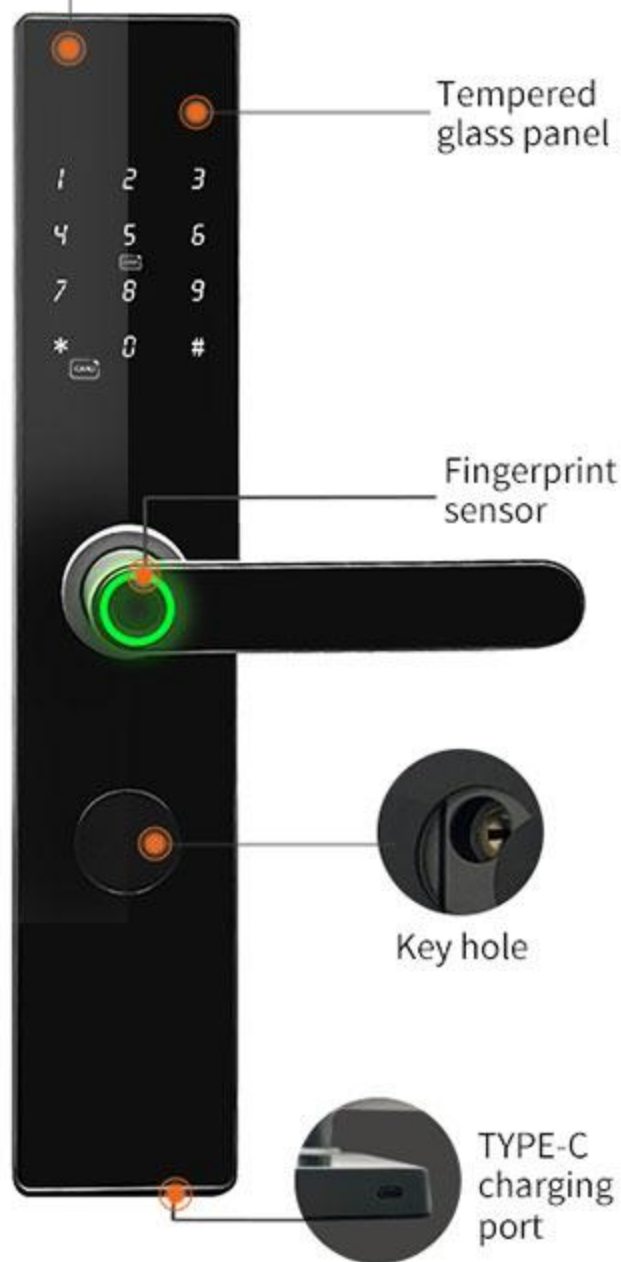

SUITABLE FOR ALL DOOR AND SCENARIOS

 wooden/composit door/steel doorblack silver

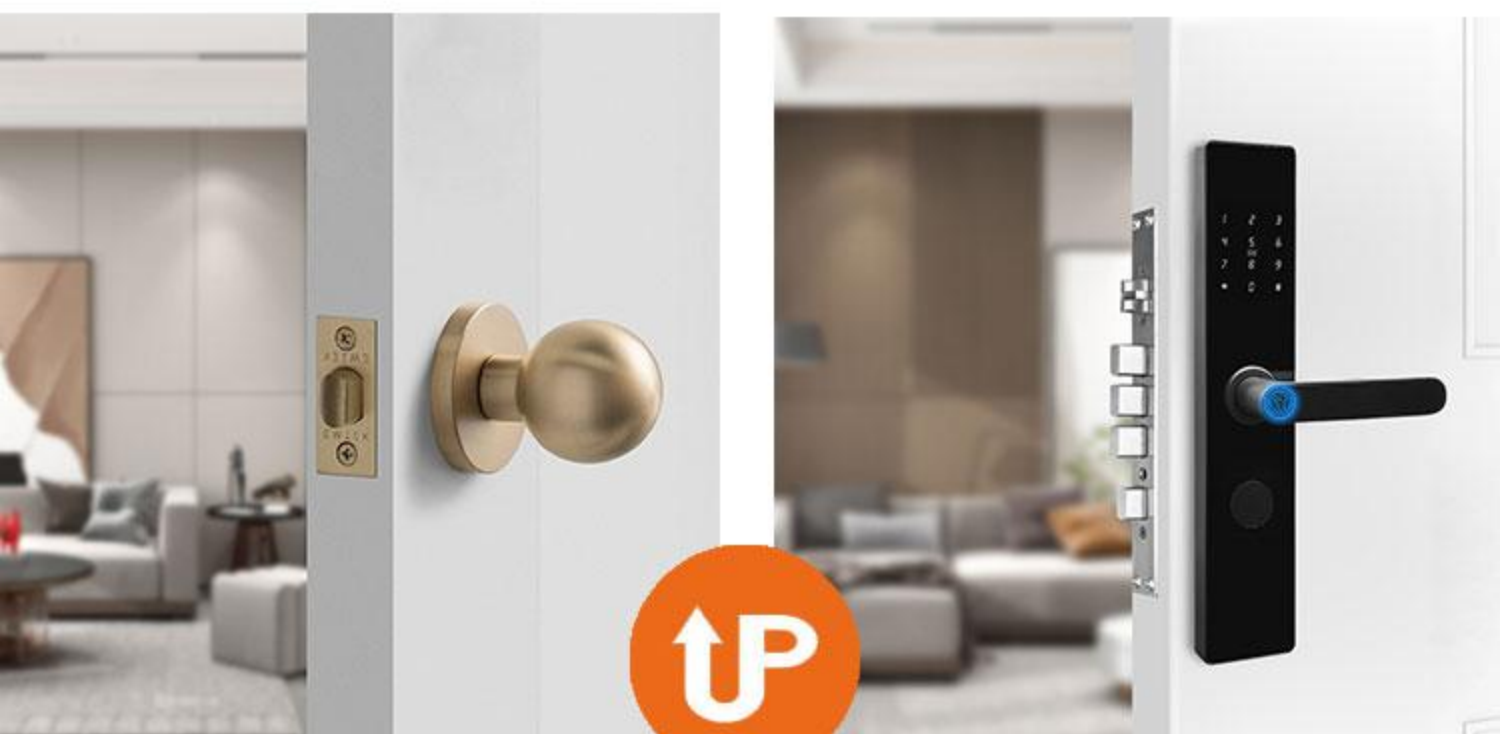

**GEARED
UP**

 


 **STEEL
DOOR**

 **WOODEN
DOOR**

 **COMPOSIT
DOOR**

Mortise type:6068

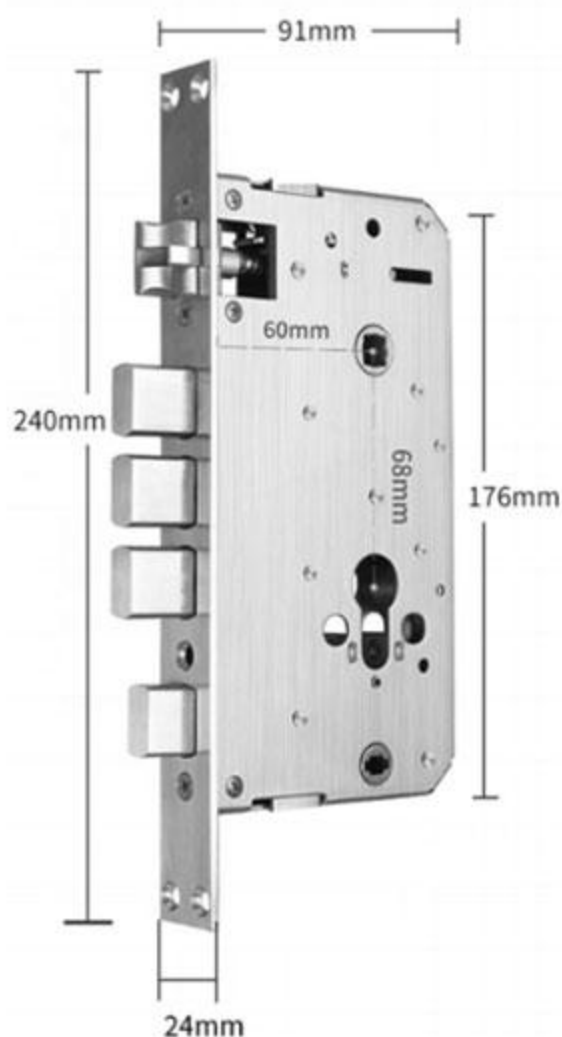

Pls choose the right mortise for your door
Standard configuration



Swing door



Sliding door



Balcony door



Aluminum door



Wooden door



Aluminum woodwrap door



Glass door



Window screen door

Universal both for Right or Left door open direction